




*Reliability & Satisfaction*

## **PRV & PRCV PORT CONNECTIONS**

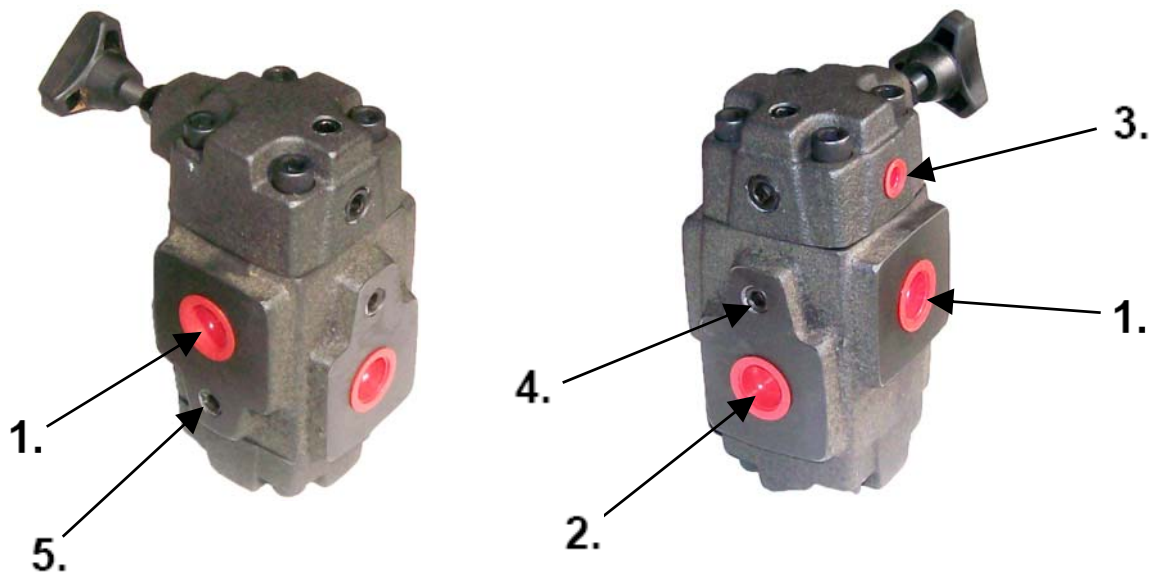

**1. Inlet Pressure Port:** There are two inlet ports. They are located on either side of the pressure reducing adjustment knob. Whichever one is not used must be plugged.

**2. Reduced Pressure Outlet Port:** There is one outlet port located opposite the pressure reducing adjustment knob.

**3. Drain Port:** The drain port is located above the inlet pressure port just to the left of the pressure reducing adjustment knob.

**4. Inlet Pressure Gauge Port:** The inlet gauge port is located just above the reduced pressure port opposite the pressure reducing adjustment knob.

**5. Reduced Pressure Gauge Port:** The reduced outlet gauge port is located just below the inlet pressure port on the right hand side of the pressure reducing adjustment knob.